

# NEWEL 3



## INSTRUKCJA OBSŁUGI

### ODZYSK CIEPŁA Z INSTALACJI CO2 TRANSKRYTYCZNEJ

Firma Digitel zastrzega sobie prawo do zmian wymienionych właściwości technicznych zawartych w tej dokumentacji

Digitel SA

Wszelkie prawa zastrzeżone

## 7. ODZYSK CIEPŁA Z INSTALACJI CO<sub>2</sub> TRANSKRYTYCZNEJ

### 7.1. INTRODUCTION

The reader of this document must read the chapter [Erreur ! Source du renvoi introuvable.](#) before reading the rest of this manual. It contains all the basic information indispensable to understand this document and the concept of the NEWE3 series.

This manual describes the operation of the modules in terms of **heat recovery**. Parameter **[r1]** of the operating mode is therefore programmed to **2**.

### 7.2. GENERAL DESCRIPTION. BASIC CONNECTIONS

Heat recovery is handled by two DC24TR modules.

The principle of operation is shown in [Figure 7.2.1](#). The connections are made according to [Figure 7.2.2](#)

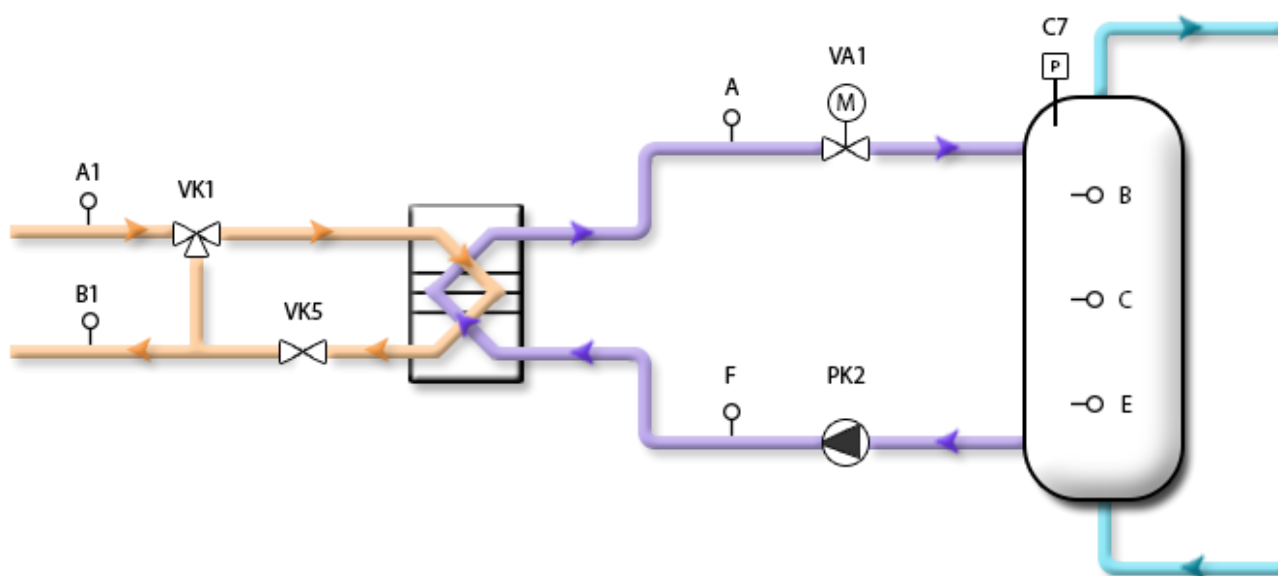


Figure 7.2.1

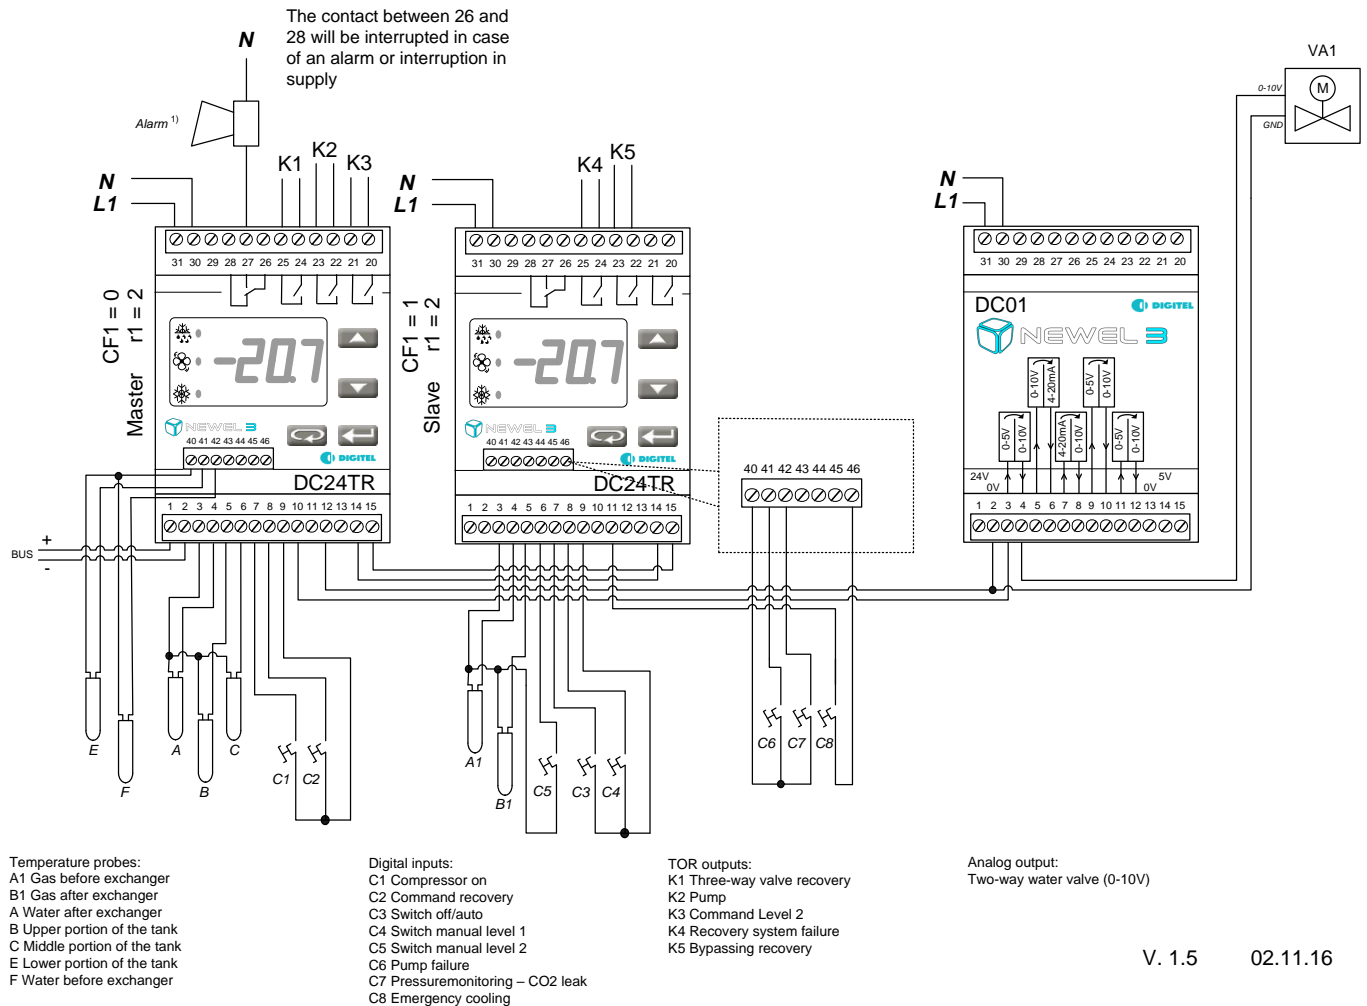


Figure 7.2.2

Control of heat recovery functions normally when the following conditions are met:

- The temperature difference (probe A1 - probe B) is greater than the value of parameter **[S1]**
- Contact C1 closed. At least one compressor is running.
- C2 closed. Recovery request.
- C3 closed. Auto control mode.
- C6 closed. Pump in order.
- C7 closed. No leak detected.
- C8 closed. Emergency cooling is not running.
- No sensor fault is detected.

Otherwise, the control is deactivated. The three-way valve cuts the flow of fluid through the heat exchanger and pump PK2 is stopped. Contacts C4 and C5 manually bypass the blockage and operate the control at level 1 and level 2, respectively, regardless of the conditions above.

In normal operation, when the temperature of sensor C drops below the value of parameter **[t1]**, level 1 of the recovery is activated. In this mode, output K1 controls the three-way valve VK1 and passes the hot gas into the heat exchanger. After the delay set in parameter **[S2]**, pump PK2 is activated in the low flow regime. The control maintains the temperature of the outlet of the exchanger (probe A) to the value set in parameter **[E1]** by acting on the opening degree of valve VA1. This is PID control. Its behaviour can be tuned by adjusting parameters **[E4]** (proportional coefficient), **[E5]** (integration coefficient) and **[E6]** (differential coefficient). Valve VK1 is closed when the temperature of probe E exceeds the value of parameter **[t2]**. Pump PK2 stops after the delay programmed in parameter **[S3]**.

Level 2 of the recovery is activated when temperature sensor B remains below the value of parameter **[t3]** longer than the value of parameter **[t5]**. Output K3 is activated to cause upward shifting of the high pressure set point and the gas cooler set point in the corresponding controls. Output K3 also activates the high speed of pump PK2. Level 2 is stopped when temperature sensor E rises above the value of parameter **[t4]**. The control then returns to level 1 (output K3 is disabled, the offsets of the HP and cooler set points are removed and the pump returns to the low flow mode).

To avoid wasteful operation at level 2, temperature B1 is monitored. When it rises above the value of parameter **[S4]**, after a time delay **[S5]** output K4 is enabled, the operation at level 2 is interrupted and the control returns to level 1. When temperature B1 drops below **[S4]**, output K4 is switched off after the programmed delay in **[S6]**. From that point, level 2 can be activated again after timeout **[t5]**, if necessary.

### 7.3. EMERGENCY COOLING

With the opening of contact C8, the "emergency cooling" mode is activated. In this mode, valve VK1 is controlled and the hot gas is passed into the heat exchanger; valve AP1 regulates the water temperature, but pump PK2 is stopped. An alarm is triggered.

### 7.4. PRESSURE MONITORING

The pressure in the hot water circuit is monitored by pressure switch C7. When it rises too high (e.g. due to leakage of CO<sub>2</sub>), contact C7 opens. In this case, valve VK1 shuts off the hot gases in the heat exchanger and output K5 is controlled to isolate the recovery circuit of the hot gas circuit with valve VK5.

---

<b>[E1]</b>	Set the water temperature (Settings menu)
<b>[E4]</b>	PID – P control (Settings menu)
<b>[E5]</b>	PID – I control (Settings menu)
<b>[E6]</b>	PID – D control (Settings menu)
<b>[t1]</b>	Level 1 start temperature (Settings menu)
<b>[t2]</b>	Level 1 stop temperature (Settings menu)
<b>[t3]</b>	Level 2 start temperature (Settings menu)
<b>[t4]</b>	Level 2 stop temperature (Settings menu)
<b>[t5]</b>	Level 2 start delay (Settings menu)
<b>[S2]</b>	Pump start delay (Settings menu)
<b>[S3]</b>	Pump stop delay (Settings menu)
<b>[S4]</b>	B1 temperature limit – fault recovery (Settings menu)
<b>[S5]</b>	K4 start delay (fault recovery) (Settings menu)
<b>[S6]</b>	K4 stop delay (fault recovery) (Settings menu)

### Basic configuration

Sym.	Lev.	Operation	Rem.	Default value	Min	Max
PAS	0	Password		0		
r1	3	Operating mode		2		
		0 = Cooler 1 = Pressure control 2 = Heat recovery				
Ad	3	Module's address				
		Do not change when the module is connected to a DI58 / DC58 central unit!				

### Settings with r1 = 2 Heat recovery

	Sym.	Lev.	Operation	Rem.	Default value	Min	Max
	PAS	0	Password		0	0	999
Control	E1	2	Set the water temperature (° C)		45.0	0	90.0
	E2	2	Minimum opening of the valve VA1 (%)		20.0	0	100
	E3	2	Maximum aperture of the valve VA1 (%)		100	0	100
	E4	2	PID - P control (proportional coefficient) (%)		30	0	100
	E5	2	PID - I control (integration coefficient) (%)		30	0	100
	E6	2	PID - D control (differential coefficient) (%)		30	0	100
Levels 1/2	t1	2	Level 1 start temperature (° C)		45.0	0	90.0
	t2	2	Level 1 stop temperature (° C)		50.0	0	90.0
	t3	2	Level 2 start temperature (° C)		42.0	0	90.0
	t4	2	Level 2 stop temperature (° C)		48.0	0	90.0
	t5	2	Level 2 start delay (min.)		5.0	0	900
Safeties	S1	2	Minimum temperature difference (sensors A1-C; ° K)		10.0	0	60.0
	S2	2	Pump start delay (dry)		20.0	0	60.0
	S3	2	Pump stop delay (min)		0.0	0	60.0
	S4	2	B1 temperature limit - fault recovery (° C)		50.0	0	100
	S5	2	K4 start delay (fault recovery) (min)		10.0	0	450
	S6	2	K4 stop delay (fault recovery) (min)		10.0	0	60.0
Time, date	H1	1	Hours settings		5	0	23
	H2	1	Minutes settings		8	0	59
	H3	2	Day and month settings		1	1	31
	H4	2	Month settings		1	1	12
	H5	2	Year settings		0	0	99
	H6	2	Day of the week settings		5	1	7

---

Alarms	Alarm code	
	13	Pump fault
	17	Auxiliary mode does not respond
	18	Recovery failure
	19	Emergency cooling
	20	Probe A failure
	21	Probe B failure
	22	Probe C failure
	24	Probe E failure
	25	Probe F failure
	26	Probe A1 failure
	27	Probe B1 failure
	28	Pressure - leak detection